



CONSOLE SECURITY COVER



PRODUCT DESCRIPTION

The Console Security Cover secures Modular's Console and its components, or standard wall mounted electrical receptacles and medical gas outlets, behind a locked steel cover to limit access to medical gas and electrical services. When needed, the cover can be unlocked and hinged down to reveal components for use.

The perimeter of the frame is shaped to avoid ligature points. The cover includes a continuous hinge, no exposed fasteners when closed, and multiple locks for enhanced security and tamper-resistance.

Modular Services Company recognizes that there is no perfect solution for the behavioral health environment and urges designers/users to perform a risk assessment to determine for themselves if this is the right product for each application. Furthermore, we recommend that patients in the behavioral health environment not be left unmonitored while the cover of this product is unlocked or open.

FINISH


The Console Security Cover is available in either a powder coated "Surf" or "Platinum Grey" finish.

CONSTRUCTION

The Console Security Cover is constructed of 14-gauge steel, with a continuous hinge along the bottom of the unit. The cover is secured in the closed position by two or three locks, keyed alike.

INSTALLATION

Installation of the product includes receiving, storage, clean-up, touch-up, carton disposal, etc. All necessary installation materials not supplied by the manufacturer are to be supplied by the contractor.

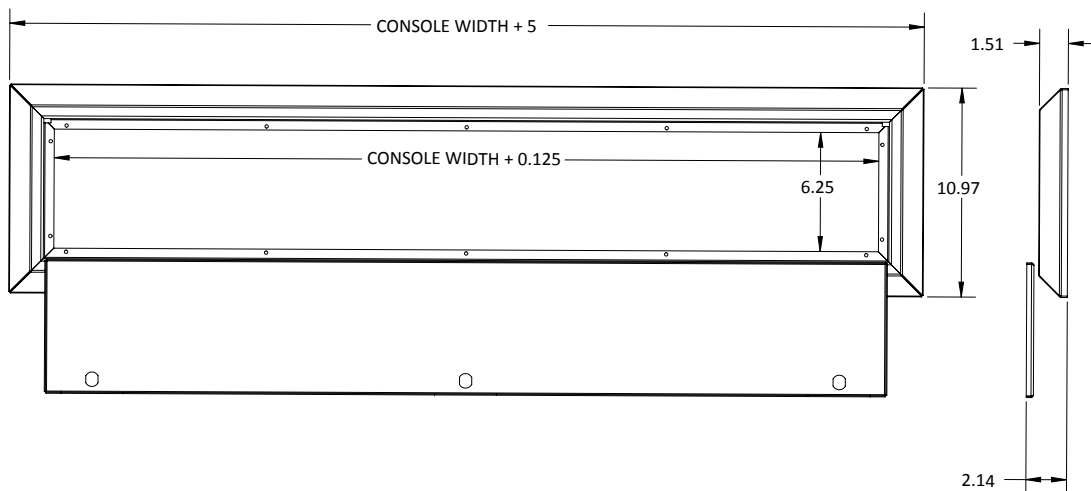

500 E. Britton Rd. • Oklahoma City, OK 73114
Tel: 800.687.0938 • Fax: 405.528.0368
www.modularservices.com
info@modularservices.com