

**MODULAR** 500 EAST BRITTON ROAD  
**SERVICES COMPANY** OKLAHOMA CITY, OK. 73114

REVISED

NICU BAY CASEWORK  
 TYPE C

PROJECT

SCALE: =1'


DATE \_\_\_\_\_ DRAWN BY \_\_\_\_\_ DRAWING #  
 PB-162

CONSOLES RECESSED 3" FROM FRONT OF UNIT



NOTES:

- ① JUNCTION BOXES: J1--NORMAL POWER, J2--EMERGENCY POWER, J3--CODE BLUE, J4--TELEPHONE.
- ② GAS PIPING: TYPE L COPPERTUBING. OXYGEN AND AIR--1/2" I.D., VACUUM--3/4" I.D.
- ③ PANEL LAMINATE COLOR: VERTICAL SURFACES TO BE DETERMINED, HORIZONTAL SURFACES TO BE DETERMINED.
- ④ CONDUIT: C1--MONITOR (1-1/4").
- ⑤ SERVICES FROM THE LOWER SECTION WILL BE TERMINATED IN THIS AREA AND WILL REQUIRE FIELD ROUTING DURING INSTALLATION.


120V, 20A NORMAL POWER ONE CIRCUIT      120V, 20A EMERGENCY POWER FIVE CIRCUITS  
 GROUND BUS—J1      J2—GROUND BUS

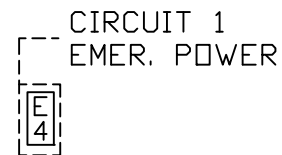

HIGH ACUITY  
 -- REQ'D    -- AS SHOWN  
 -- OPPOSITE

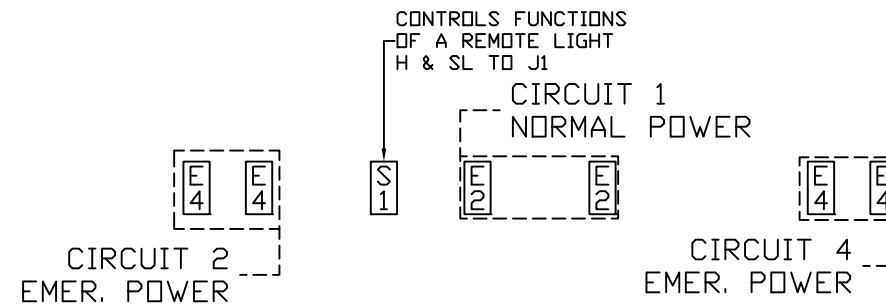

CIRCUIT 3  
 EMER. POWER



CIRCUIT 5  
 EMER. POWER

**WIRING DIAGRAM**

GROUND WIRING TO BE #10  
 GREEN STRANDED COPPER.

