


- NOTES:
 1. FORM UNIT IS FLOOR MOUNTED. SERVICES ARE TOP FED. UNIT IS BUILT IN TWO VERTICAL MODULES.
 2. THE ACTUAL LOCATIONS OF THE JUNCTION BOXES, CONDUIT TERMINATION POINTS AND MEDICAL GAS TERMINATION POINTS ARE SUBJECT TO CHANGE.
 3. INSET SURFACE PROVIDED AT BASE FOR GYPSUM BOARD AND BASE MATERIAL (BY OTHERS) TO BE INSTALLED BELOW PANELS.
 4. INTER CONNECTIONS MAY BE REQUIRED BETWEEN MODULES.
 5. SERVICES TO BE REVERSED ON OPPOSITE HAND UNITS

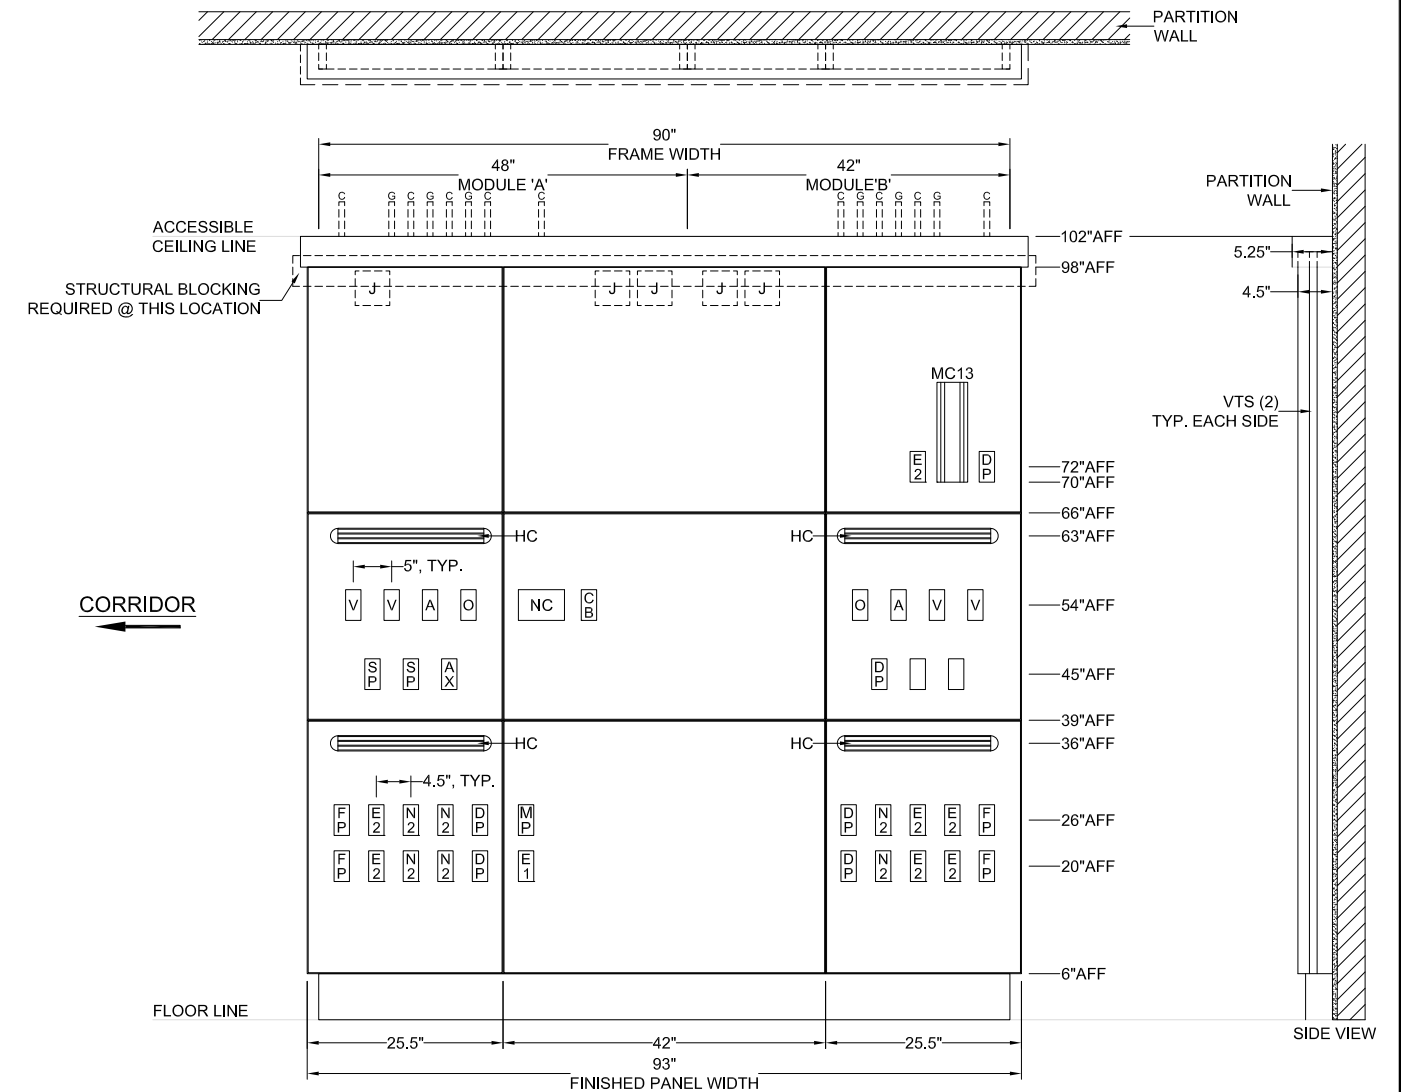

GENERAL SPECIFICATIONS:						LEGEND:				ACCESSORIES NOT SHOWN (PER UNIT)			
ELECTRICAL		PLUMBING		FINISHES		REQ	SYM	DESCRIPTION	REQ	SYM	DESCRIPTION	REQ	DESCRIPTION
NORMAL POWER JUNCTION BOX:	J	COPPER TUBING TYPE:	L	LAMINATE: L1		2	O	OXYGEN OUTLET	6	DP	DATA OUTLET PROVISION		
EMERGENCY POWER JUNCTION BOX:	J	OXYGEN SIZE (I.D.):	1/2"	TYPE:	LAMINATE BRAND:	LAMINATE COLOR:	GRAIN ORIENTATION:	2	A	AIR OUTLET	4	FP	FUTURE PROVISION
LIGHTING JUNCTION BOX:	J	MEDICAL AIR SIZE (I.D.):	1/2"	-	-	-	-	4	V	VACUUM OUTLET	1	MP	MULTI-PIN BED RECEPT. PROVISION
LV CONDUIT STUBS:	C	VACUUM SIZE (I.D.):	3/4"	BACK LIT LED RESIN PANEL: R1 OR LAMINATE: L2		6	N2	DUPLEX RECEPTACLE, 8300 IVORY 20A, 125V, H.G., NORMAL POWER	1	MC13	MONITOR CHANNEL ONLY, 13" LENGTH		
CONDUIT SIZE; LINE VOLTAGE:	1/2"			TYPE:	LAMINATE BRAND:	LAMINATE COLOR:	GRAIN ORIENTATION:	1	E1	SINGLE RECEPTACLE, 8310 RED, 20A, 125V, H.G., EMER. POWER	4	HC	HORIZONTAL ACCESSORY CHANNEL
CONDUIT SIZE; LOW VOLTAGE:	3/4"			-	-	-	-	7	E2	DUPLEX RECEPTACLE, 8300 RED 20A, 125V, H.G., EMER. POWER	2	VTS	VERTICAL EQUIPMENT MOUNTING TRACK, SIDE
CONDUIT CONNECTORS:	STD. SET SCREW							1	NC	NURSE CALL PROVISION			
WIRE TYPE:	THHN, STRANDED			ELECTRICAL COVER PLATES:		STAINLESS OR NYLON TO MATCH DEVICE		1	CB	CODE BLUE PROVISION			
WIRE SIZE:	12 AWG			HORIZONTAL CHANNELS:		ANODIZED ALUMINUM		1	AX	AUXILIARY ALARM PROVISION			
GROUND WIRE COLOR:	GREEN			UNIT TRIM:		ANODIZED ALUMINUM		2	SP	SWITCH PROVISION			

PROJECT HOSPITAL PROJECT CITY, STATE	MODULAR SERVICES COMPANY 500 EAST BRITTON ROAD OKLAHOMA CITY, OK 73114 www.modularservices.com	TOTAL QTY: X	FORM® 7500 SERIES FLOOR MOUNTED	
	AS SHOWN: X	DRAWN BY: XXX	DRAWING # 4XXXX	
	OPPOSITE: X	DATE: XX/XX/XX	PROJECT #: XXXX	SALES ORDER #: XXXXX